



# Model CK92

## .177 CALIBER PELLET CO<sub>2</sub> AIR PISTOL

# OWNER'S MANUAL

READ ALL INSTRUCTIONS AND WARNINGS IN THIS MANUAL  
BEFORE USING THIS AIR PISTOL

Incluye instrucciones en español al reverso

Crosman Corporation  
Rts. 5 & 20  
East Bloomfield, NY 14443

CK92-515

**WARNING:** Not a toy. Adult supervision required. Misuse or careless use may cause serious injury or death. May be dangerous up to 400 yards (368 meters). You and others with you should always wear shooting glasses to protect your eyes. Read all instructions before using. Buyer and user have the duty to obey all laws about the use and ownership of this airgun.

THIS AIRGUN IS INTENDED FOR USE BY THOSE 16 YEARS OF AGE OR OLDER.

Congratulations and thank you for purchasing the Crosman Model CK92 .177 caliber pellet CO<sub>2</sub> air pistol. Please read this owner's manual completely. And remember, this air pistol is not a toy. Treat it with the same respect you would a firearm. Always carefully follow the safety instructions found in this owner's manual and keep this manual in a safe place for future use. If you have any questions regarding your new air pistol, please contact Crosman at 1-800-724-7486, 716-657-6161 or www.crosman.com.

### STEPS FOR SAFE SHOOTING

- Step 1. Learning the Parts of Your New Air Pistol
- Step 2. Operating the Safety
- Step 3. Removing and Installing CO<sub>2</sub> Cartridge
- Step 4. Loading and Unloading Pellets

- Step 5. Aiming and Firing Safely
- Step 6. Removing a Jammed Pellet
- Step 7. Maintaining Your Air Pistol
- Step 8. Reviewing Safety

### Step 1. Learning the Parts of Your New Air Pistol

Learning the names of the parts of your new air pistol will help you to understand your owner's manual. Use this manual to increase your enjoyment of this air pistol.

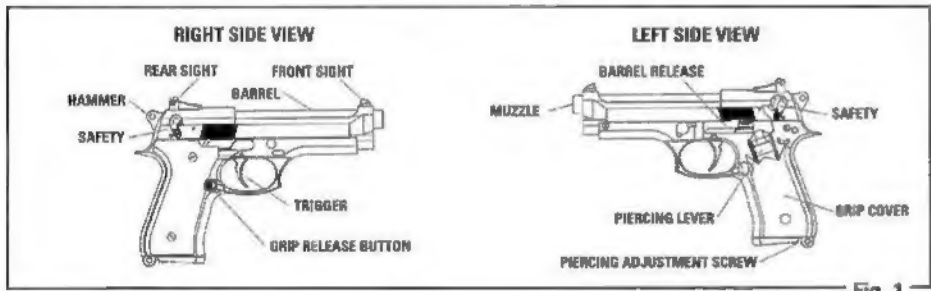


Fig. 1

### Step 2. Operating the Safety

**WARNING:** Keep the air pistol in the "ON SAFE" position until you are actually ready to shoot. Then push the safety to the "OFF SAFE" position.

#### A. To Put the Air Pistol "ON SAFE":

- Rotate the safety lever to the lower position until it stops, covering the RED indicator. (Fig. 2) The safety is not on unless the safety lever is moved all the way to the lower position and the red indicator is not showing. The air pistol will not fire when "On Safe". Even when the safety is "On Safe", you should continue to handle the air pistol safely. Do not ever point the air pistol at any person. Do not ever point the air pistol at anything you do not intend to shoot.

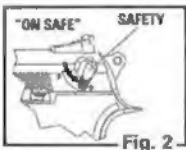


Fig. 2

#### B. To Take the Air Pistol "OFF SAFE":

- Rotate the safety lever up to the horizontal position exposing the RED indicator. (Fig. 3)
- The air pistol is ready to fire when "Off Safe". When you can see the RED indicator, the air pistol is "Off Safe" and can be fired.

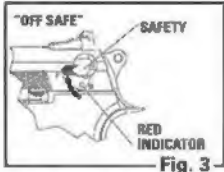


Fig. 3

### Step 3. Removing and Installing CO<sub>2</sub> Cartridge

**WARNING:** Keep hands away from escaping CO<sub>2</sub> gas. It can cause frostbite if allowed to come in contact with skin. Always make sure the CO<sub>2</sub> cartridge is properly emptied before attempting to remove it from the air pistol. (See Step 3A Below)

**WARNING:** CO<sub>2</sub> cartridges may explode at temperatures above 120°F. Do not mutilate or incinerate them. Do not expose them to heat or store CO<sub>2</sub> cartridges at temperatures above 120°F.

#### A. Removing CO<sub>2</sub> Cartridge

- Unload ALL of the pellets from the air pistol. (See Step 4B)
- Point the air pistol in a SAFE DIRECTION.
- Take the air pistol "Off Safe". (See Step 2B)
- Squeeze and hold the trigger back and, using force, push and hold the hammer all the way forward until the air pistol stops releasing CO<sub>2</sub> gas. (To make sure all of the CO<sub>2</sub> gas has been released, point the air pistol in a SAFE DIRECTION and fire it a couple of times until you no longer hear the escape of CO<sub>2</sub> gas.)
- Remove the grip cover from the left side of the air pistol by pushing on the grip release button on the right side of the air pistol. (Fig. 4)
- Slowly pull out the piercing lever at the tabbed end and swing downward to open, exposing the CO<sub>2</sub> cartridge. (Fig. 5) If the piercing lever is difficult to open, loosen the piercing adjustment screw slightly.
- Remove the CO<sub>2</sub> cartridge by sliding the cartridge downward and tilting the air pistol until the CO<sub>2</sub> cartridge drops out.

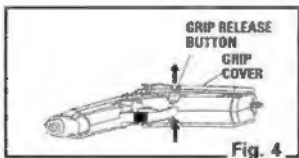


Fig. 4



Fig. 5

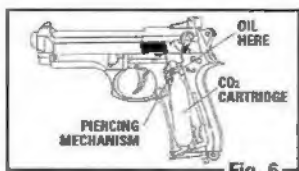


Fig. 6

#### B. Installing the CO<sub>2</sub> Cartridge

- With the grip cover removed and the piercing lever in the open position (See Step 3A Above), insert a new CO<sub>2</sub> cartridge with the neck of the cartridge pointing toward the piercing mechanism. (Fig. 6)
- Close the piercing lever until resistance is felt.
- NOTE:** The piercing mechanism has been preset at the factory but may require resetting from time to time to accommodate for normal wear in the mechanism or slight lot to lot manufacturing variations in CO<sub>2</sub> cartridge lengths. If the scribed mark on the piercing lever is not aligned with the grip face as shown in Fig. 7, you will need to reset the piercing mechanism before closing the piercing lever.
- Resetting Piercing Mechanism:** Use a screwdriver to turn the piercing adjustment screw in order to align the scribed mark on the piercing lever with the grip face. (Fig. 7) The CO<sub>2</sub> cartridge is now ready for piercing.
- Completely close the piercing lever, point the air pistol in a SAFE DIRECTION, take "Off Safe" (See Step 2B) and pull the trigger. If the air pistol does not make a popping noise after pulling the trigger, the CO<sub>2</sub> is not being discharged. In that event, you will have to tighten the piercing adjustment screw in 1/4 turn increments until CO<sub>2</sub> is discharged when you pull the trigger.
- Replace the grip cover.
- Return the safety to the "On Safe" position. (See Step 2A)

**NOTE:** We recommend the use of Copperhead® brand Powerlet® CO<sub>2</sub> cartridges. They are made to fit the Model CK92 air pistol. Other brands of CO<sub>2</sub> cartridges may not fit properly and if you force them into place it may result in injury to you or damage to your air pistol. Never try to force any CO<sub>2</sub> cartridge into or out of place. Do not store your air pistol with a full CO<sub>2</sub> cartridge in it. (This is very important to remember, as it will prolong the longevity of your air pistol seals.) If you know you will not be using your air pistol for an extended period of time, properly empty the CO<sub>2</sub> cartridge before removing it from the air pistol. (See Step 3A Above)

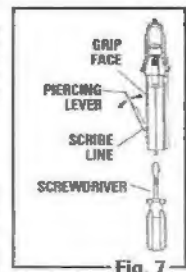


Fig. 7

### Step 4. Loading and Unloading Pellets

**WARNING:** Use .177 caliber pellets only. Never reuse ammunition. Use of any other ammunition can cause injury to you or damage to the air pistol.

#### A. Loading Pellets

- Put the air pistol "On Safe". (See Step 2A)
- Point the air pistol in a SAFE DIRECTION.
- Open the barrel by pushing the barrel release forward until the barrel pops open. (Fig. 8)
- The air pistol will not fire when the barrel is in the open position.
- Remove the pellet clip and place a .177 pellet, nose first, in each pellet chamber. (Fig. 8) To avoid jams or deforming the pellets, make sure the pellet skirt is level or slightly below the rim of the pellet chamber.
- Replace the pellet clip on the barrel as shown in Fig. 8.
- Close the barrel by pressing downward on it until it snaps shut.

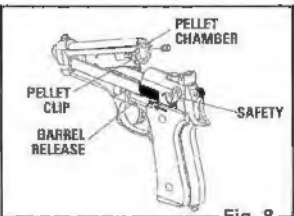


Fig. 8

#### B. Unloading the Pellets

- Put the air pistol "On Safe". (See Step 2A)
- Open the barrel. (See Step 4A)
- Remove the pellet clip. Using a ramrod or straightened clothes hanger, gently push each pellet out of the pellet clip. **NOTE:** Never use sharp metal tools to remove pellets.
- Look down the breech end of the barrel to be sure the air pistol is completely unloaded.
- If there is a pellet in the barrel, insert a ramrod or straightened clothes hanger into the barrel. (Start at the breech.)
- Push the pellet out the muzzle of the air pistol from the breech. (Fig. 9)
- Do not try to reuse that pellet.

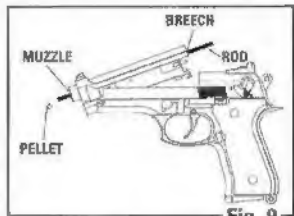


Fig. 9

### Step 5. Aiming and Firing Safely

#### A. Aiming and Firing the Air Pistol

- You and others with you should always wear shooting glasses to protect your eyes.
- Always aim your air pistol in a SAFE DIRECTION. When you are sure of your target and backstop, and the area around the target is clear, take the air pistol "Off Safe" (See Step 2B) and squeeze the trigger to fire.
- Do not shoot at hard surfaces or at the surface of water. The pellet may bounce off or ricochet and hit someone or something you had not intended to hit.
- Always choose your target carefully. It is best to shoot at paper bullseye targets which are attached to a safe backstop such as the Crosman 850 Target Trap. A heavy blanket should be hung behind the Target Trap to prevent ricochet should you miss the backstop.
- Your backstop should be checked for wear before and after each use. Replace your backstop if the surface is worn or damaged or if a ricochet occurs.
- Your air pistol is designed for target shooting and is suited for both indoor and outdoor use. Always remember to place your target carefully. THINK about what you will hit if you miss the target.
- The air pistol is correctly aimed when the front sight blade is positioned exactly in the notch of the rear sight. The top of the front sight blade should be even with the top of the notch in the rear sight. The bullseye should appear to rest on the top of the front sight. (Fig. 10)

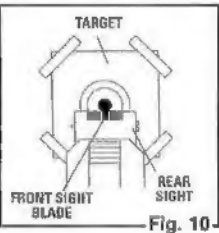


Fig. 10

#### B. Sight Adjustment

Move the rear sight in the same direction you want the pellet to hit on the target. (Fig. 11)

**Elevation Adjustment:** Turn screw clockwise to move point of impact up, turn screw counter-clockwise to move point of impact down.

**Windage Adjustment:** Turn screw clockwise to move point of impact to right and counterclockwise to move point of impact to left.

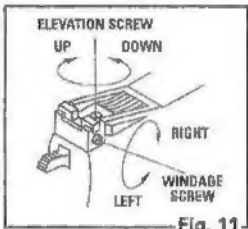


Fig. 11

### Step 6. Removing a Jammed Pellet

- Put the air pistol "On Safe". (See Step 2A)
- Empty and remove the CO<sub>2</sub> Cartridge. (See Step 3A)
- Open the barrel. (See Step 4A)
- Insert a ramrod or straightened clothes hanger into the barrel. (Start at the breech.)
- Push the jammed pellet out of the muzzle end of the air pistol from the breech as shown in Fig. 9.
- Do not try to reuse that pellet.
- If you are not able to unjam your air pistol by following this procedure take no further action. Crosman Corporation or an Authorized Service Station will unjam your air pistol (no cost during the warranty period).

### Step 7. Maintaining Your Air Pistol

- Your air pistol will work best if you oil it every 250 shots. Put a drop of Crosman 0241 Lubricating Oil directly on the tip of a CO<sub>2</sub> cartridge before inserting (See Fig. 6) and on the piercing adjustment screw. (See Fig. 5) DO NOT use a petroleum distillate based oil or solvent and DO NOT over-oil as this can cause damage to your air pistol.
- Tampering with the air pistol or attempts to change the air pistol in any way may make it unsafe to use and will void the warranty.
- If you drop your air pistol, check to see that it works properly before you use it again. If anything seems changed, like a shorter or weaker trigger pull, this may mean worn out or broken parts. Call the factory for assistance before using the airgun again.

### Step 8. Reviewing Safety

- Do not ever point the air pistol at any person. Do not ever point the air pistol at anything you do not intend to shoot.
- Always treat the air pistol as though it was loaded and with the same respect you would a firearm.
- Always aim in a SAFE DIRECTION. Always keep the muzzle of the air pistol pointed in a SAFE DIRECTION.
- Always keep the air pistol "On Safe" until you are ready to shoot in a SAFE DIRECTION.
- Always check to see if the air pistol is "On Safe" and unloaded when getting it from another person or from storage.
- Always keep your finger off the trigger and out of the trigger guard until ready to shoot.
- You and others with you should always wear shooting glasses to protect your eyes.
- Keep hands away from escaping CO<sub>2</sub> gas. It can cause frostbite if allowed to come in contact with skin.
- Use .177 caliber pellets only. Never reuse ammunition.
- Do not shoot at hard surfaces or at the surface of water. The pellet may bounce off or ricochet and hit someone or something you had not intended to hit.
- Replace the backstop if it becomes worn. Place backstop in a location that will be safe should the backstop fail.
- Do not attempt to disassemble or tamper with your air pistol. Use an authorized Service Station or return it to the factory for repair.
- Do not put the air pistol away loaded or charged with CO<sub>2</sub>. Make sure ALL of the pellets are unloaded from the air pistol. (See Step 3A and 4B)
- Always keep your CrosBlock® trigger block in place when storing this air pistol in a secure location. (See CrosBlock instructions packaged with this air pistol for assistance.)

### SPECIFICATIONS

Mechanism:	8 shot revolver	Barrel:	4 1/4" (10.8 cm) Rifled Steel
Caliber:	.177	Power:	
Ammunition:	.177 cal. (4.5 mm) Lead airgun pellet	Source:	12 gram CO <sub>2</sub> cartridge
Weight:	42 oz. (1.180 kg)	Safety:	Lever
Length:	8.5" (21.7 cm)	Velocity:	Up to 435 fps (132.7 m/s)
Sights: Rear:	Adjustable for Windage and Elevation		
Front:	Fixed Blade		

### PERFORMANCE

Operating air pistol below 70°F will decrease the number of effective shots. The reverse is true for operating above 70°F. Many factors affect velocity, including brand of projectile, type of projectile, amount of CO<sub>2</sub> in cartridge, lubrication, barrel condition and temperature. Shooting more than 50 pellets per CO<sub>2</sub> cartridge may result in unsatisfactory accuracy due to lower velocities.

**WARNING:** Lead pellets - do not inhale pellet dust or put pellets in mouth. Wash hands after handling. Lead is a toxic substance listed under CA Prop. 65 as causing reproductive toxicity.

### REPAIR SERVICE

If your air pistol needs repair, we recommend that you take or send it to an Authorized Service Station or send it to Crosman Corporation. (International customers should contact their distributor.) DO NOT ATTEMPT TO DISASSEMBLE IT! Your air pistol requires special tools and fixtures to repair it. If you take it apart, you probably will not be able to reassemble it correctly. Crosman assumes no warranty responsibility under such circumstances.

### NEED ASSISTANCE?

Please do not return this air pistol to the store. If you experience any problems with or have any questions about this air gun, please call our Customer Service Department. Telephone numbers for assistance or accessory orders are included on the Service Station Listing packaged with this airgun.

### LIMITED ONE YEAR WARRANTY

This product is warranted to the retail consumer for one year from date of retail purchase against defects in material and workmanship and is transferable. To register the serial number of your gun, please return the Product Registration form found in your owner's manual packet. The warranty is not conditioned on the return of the card.

### WHAT IS COVERED

Replacement parts and labor. Transportation charges to consumer for repaired product.

### WHAT IS NOT COVERED

Transportation charges to Crosman for defective product. Damages caused by abuse or failure to perform normal maintenance. (See Step 7) Any other expense. CONSEQUENTIAL DAMAGES, INCIDENTAL DAMAGES, OR INCIDENTAL EXPENSES, INCLUDING DAMAGE TO PROPERTY. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

### WARRANTY CLAIMS

**USA Customers:** Attach your name, address, description of problem, phone number and copy of sales receipt to product. Package and return to Crosman Corporation, Rts. 5 & 20, E. Bloomfield, NY 14443.

**Canadian Customers:** Follow packaging procedures above and send to Crosman Parts & Service Depot, 427 Pido Road, P.O. Box 2421, Peterborough, Ontario K9J 7Y8 Canada.

**International Customers:** Please return product to your nearest distributor. If you do not know your distributor, please call 716-657-6161 and ask for our International Department for assistance.

### IMPLIED WARRANTIES

ANY IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO ONE YEAR FROM DATE OF RETAIL PURCHASE. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU.

To the extent any provision of this warranty is prohibited by federal, state, or municipal law which cannot be preempted, it shall not be applicable. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state and country to country.

CROSMAN, COPPERHEAD, POWERLET and CROSBLOCK are registered trademarks of Crosman Corporation in the United States.